Attributes Rules

<u>Attribute rules</u> are provided to enhance the editing experience. It is recommended to review these rules to understand the automatic database behavior. These rules may need to be adjusted or enabled to match your implementation.

Contents

Generate IDs	1
Containment Association	2
Attribute Adjustment	2
Cathodic Protection	3
Intersection	3

Generate IDs

Generate IDs for DHCAssembly

Description: Generate IDs for DHCAssembly using database sequences

Is Enabled: TrueTrigger: Insert

• Associated Batch rule: False

Generate IDs for DHCDevice

• **Description:** Generate IDs for DHCDevice using database sequences

Is Enabled: TrueTrigger: Insert

Associated Batch rule: False

Generate IDs for DHCJunction

• **Description:** Generate IDs for DHCJunction using database sequences

Is Enabled: TrueTrigger: Insert

Associated Batch rule: False

Generate IDs for DHCLine

• **Description:** Generate IDs for DHCLine using database sequences

Is Enabled: TrueTrigger: Insert

• Associated Batch rule: False

Generate IDs for StructureBoundary

• **Description:** Generate IDs for StructureBoundary using database sequences

Is Enabled: TrueTrigger: Insert

Associated Batch rule: False

Generate IDs for StructureJunction

• **Description:** Generate IDs for StructureJunction using database sequences

Is Enabled: TrueTrigger: Insert

Associated Batch rule: False

Generate IDs for StructureLine

• **Description:** Generate IDs for StructureLine using database sequences

Is Enabled: TrueTrigger: Insert

Associated Batch rule: False

Containment Association

DHCDevice Containment Association

 Description: Calculation to automatically create containment association between content and container

Is Enabled: TrueTrigger: Insert

• Associated Batch rule: False

DHCJunction Containment Association

 Description: Calculate the containment association between the content and the container

Is Enabled: TrueTrigger: Insert

• Associated Batch rule: False

Attribute Adjustment

DHCLine Pipe Surface Area

• **Description:** Calculation to automatically calculate the pipes exterior surface area

• Is Enabled: True

• Trigger: Insert, Update

Associated Batch rule: False

DHCLine Pipe Volume

• **Description:** Calculate pipe volume from diameter and shape length

• Is Enabled: True

• Trigger: Insert, Update

• Associated Batch rule: False

DHCLine Pipe Slope

• **Description**: Calculates the elevation slope of the pipe segment

• Is Enabled: True

• Trigger: Insert, Update

Associated Batch rule: False

Cathodic Protection

DHCDevice CP Traceability

• **Description:** Set Traceability flag for junction assets

• Is Enabled: True

• Trigger: Insert, Update

Associated Batch rule: False

DHCJunction CP Traceability

 Description: Cathodic Protection Traceability for Water Junctions. Set traceability flag for junction assets

• Is Enabled: True

Trigger: Insert, Update

Associated Batch rule: False

DHCLine_CPTraceability

• **Description:** Calculation to populate and maintain the CPTraceability attribute

• Is Enabled: True

• Trigger: Insert, Update

Associated Batch rule: False

Intersection

DHCDevice Connection Diameter Inherit Diameter

Description: Auto-populate connection diameter from coincident pipe diameter value

• Is Enabled: True

• Trigger: Insert, Update

• Associated Batch rule: False